




# Sony NWZ-E473 Back Panel Replacement

This is how to disassemble the back panel of the device.

Written By: lamallery

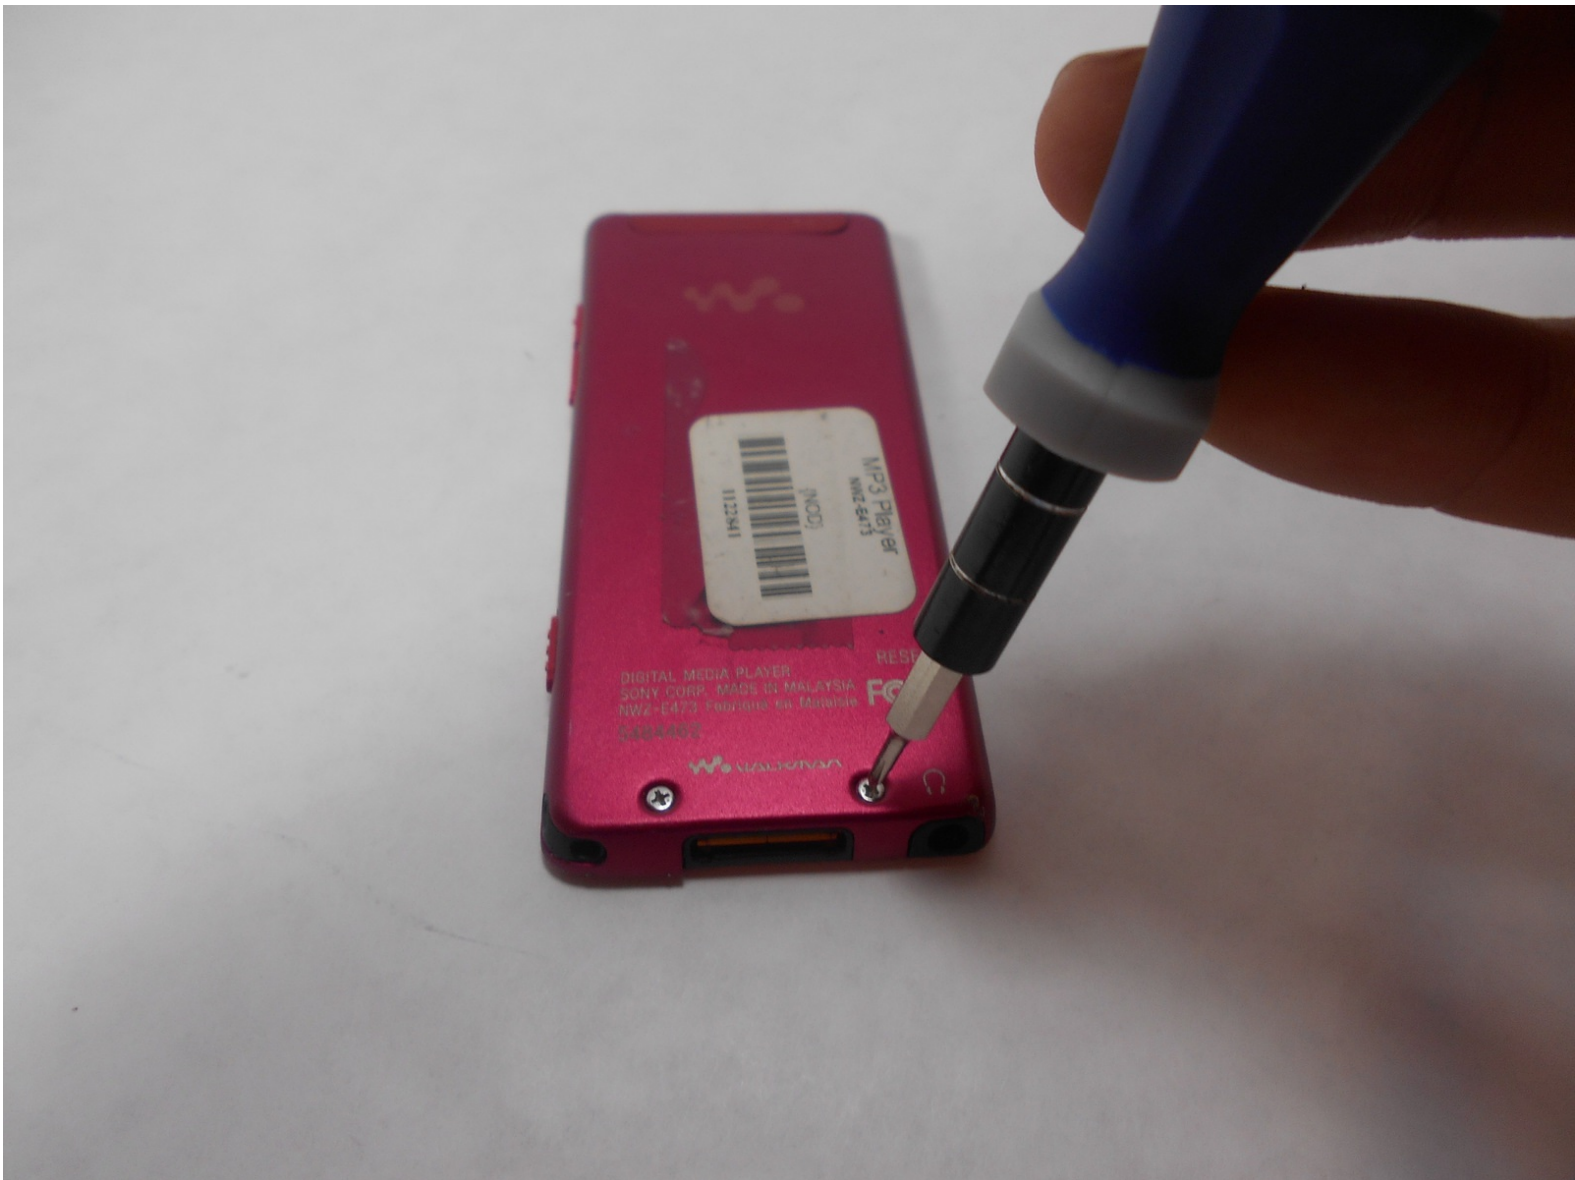

## INTRODUCTION

To complete this guide, you will need a screw driver and a prying device. Caution is advised when prying the back panel because permanent damage may occur if done incorrectly.


---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Initial screw removal

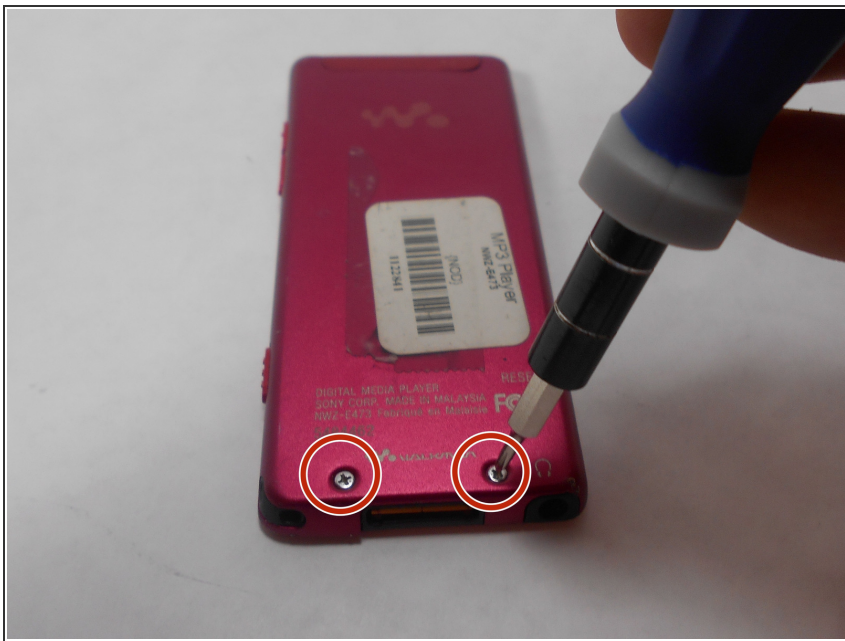

- Unscrew two 5 mm Phillips #00 screws using a Phillips #00 screwdriver located on the bottom of the back of the device.

## Step 2 — Using a prying tool, loosen bottom portion of device.



- Using a plastic opening tool, loosen the bottom portion of device.

### Step 3 — Using prying tool, loosen top panel of the device.



- Using a plastic opening tool, loosen the top panel of the device.

### Step 4 — Remove screws from portion under top panel of the device.



- Remove two 3 mm Philips #00 screws using a Phillips #00 screwdriver located on the portion under the top panel of the device.



## Step 5 — Remove back plate from device.



- Remove back plate from device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-17 04:14:04 AM.